



*Truck and Jeep Accessories*



## INSTALLATION INSTRUCTIONS

**2015-16 Jeep Renegade  
Winch Bumper  
KJ50004BK**

**FOR TRAILHAWK MODELS ONLY!**

Supplied Hardware

Winch Bumper - 1

Bracket Right - 1

Bracket Left - 1

Support Bracket Right - 1

Support Bracket Left - 1

Bag Kit Hardware BU21873 consisting of:

1-1/2" x 1/2" Bolts - 8

1/2" Stover Nuts - 8

1/2" SAE Flat Washers - 16

Plastic Clips - 12

Plastic Rivets - 4

The installation of this product requires the front fascia (grille, bumper cover and valance) to be removed (in one piece). It is recommended the installation is performed by a professional familiar with late model vehicles. In the disassembly of the front fascia you may break a few clips, replacement clips are provided. **READ ALL INSTRUCTIONS BEFORE STARTING.**


1. Remove the rectangular filler panels to the inside of the fog lights of the bumper cover.
2. Open hood.
3. Remove 4 T-55 Torx bolts and 4 plastic rivets that secure the top of grill.
4. Remove 5 T-30 Torx bolts located underneath the vehicle securing the bottom of the front fascia to the core support. (Also remove 2 phillips screws if required.)
5. Remove 3 T-25 Torx screws or phillips screws on each side of vehicle that secure the inner-fender to the bumper cover.
6. Gently pull on the front of the fender flare and pop it loose from the bumper cover. **Note:** It is only necessary to pop the front part of the flare loose from the bumper cover (front fascia), it does not need to be removed from the fender.  
Also remove 2 hex headscrews on each side that attach the fascia to the fender.
7. Pop the bumper cover away from the bottom of the fender, it is clipped in.  
Note: The complete front fascia should be loose and almost ready to be removed.
8. Reach in from behind the inner fender well and with a quarter turn remove the 3 bulbs from the marker lights and fog lights (3 per side, 6 total). Also remove any necessary harness clips. Now the complete front fascia can be removed and set aside.

9. Remove aluminum bumper structure. Using a 15mm socket, remove 4 bolts on each side of vehicle. Then remove 3 nuts using 10mm socket, 2 on driver side and 1 on passenger side. **Note:** Do not discard hardware.
10. Remove aluminum bumper.

## INSTALLATION

1. Attach the frame winch mounting brackets. The frame brackets sandwich between the end of the frame and the aluminum bumper. Orientate the frame brackets as shown in the picture and loosely re-install the aluminum bumper with factory hardware.
2. Align the frame brackets; temporarily install the winch mount between the frame brackets using the supplied 1/2" hardware, a couple bolts on each side will be enough.
3. Tighten the aluminum bumper factory hardware.
4. Remove the winch mount from the frame brackets.
5. Place bumper cover back on vehicle and re-install light bulbs back in marker and fog lights.
6. Loosely attach all hardware on the front fascia, replace any broken clips, snap bumper cover and flares back in place, then tighten all hardware.
7. Attach winch mount with supplied 1/2" hardware. Start all bolts, then tighten.
8. Install winch following winch installation instructions.
9. Double check all bolts to bumper and winch mount to be sure everything is tight and secure.
10. If installing winch mount accessories, follow each accessory installation instructions.

Driver's side shown:

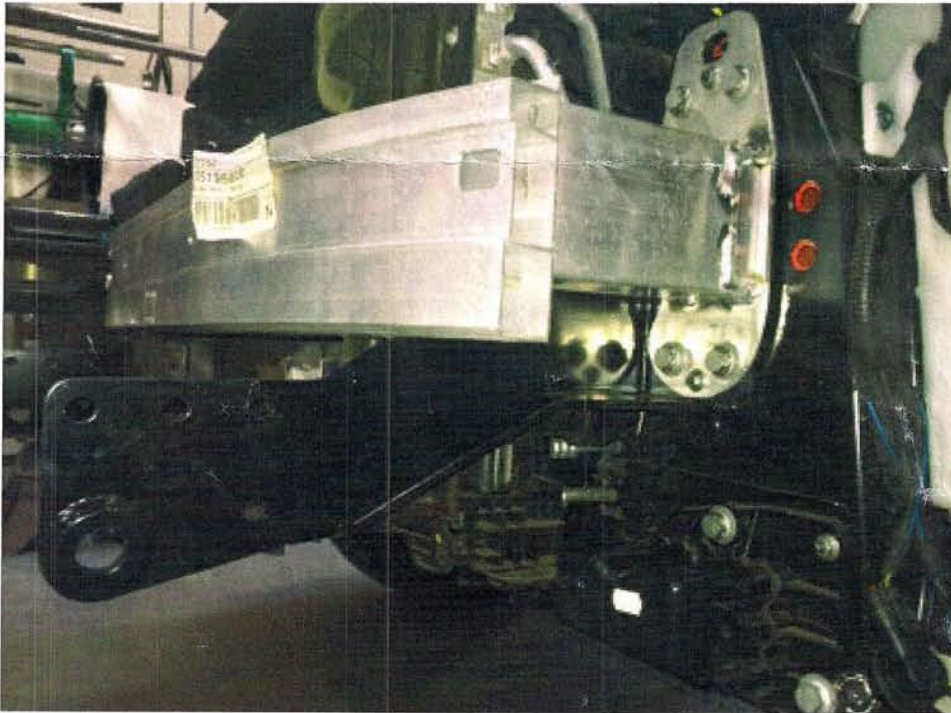

[www.DaystarWeb.com](http://www.DaystarWeb.com)  
Tech Support Contact Info  
[Tech@DaystarWeb.com](mailto:Tech@DaystarWeb.com)  
Phone: 623.907.0081  
Fax 623.907.0088  
841 S 71st Ave  
Phoenix AZ 85043

Instruction Sheet P21852  
©2016 Daystar Products International, Inc.

Revision 2  
Revision: Date 07-06-16  
Revised by: MS